


Quick Start

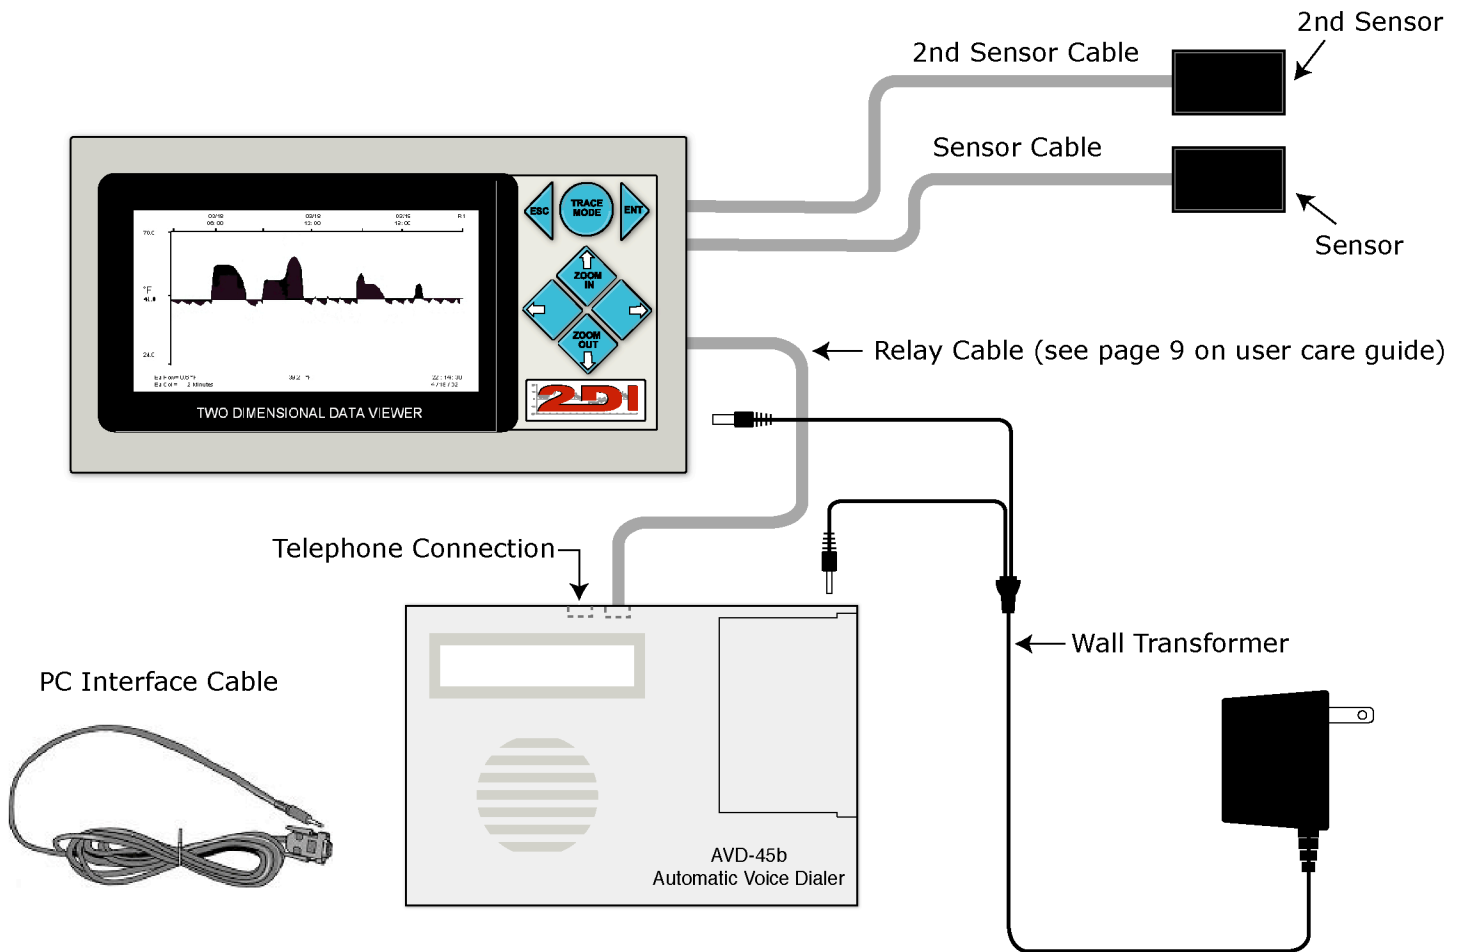

Quick Start ThermoViewer Setup

After attaching the power supply, the probes and the optional phone dialer

1. Program the ThermoViewer (See Installation & Use and Care Guide), to collect and display temperatures.
2. Program the ThermoViewer to trigger the Auto Dialer using the setup menu.
 - a. Set the alarm trigger points on the ThermoViewer
 - i. Access the Probe # menu and move the cursor to the Relay field.
 1. Enable the Relay by pressing the down arrow while the cursor is positioned on the Relay Disabled field. This will change the Relay to Enabled. Press the Enter button.
 2. Set the Activate relay fields to 7:00 using the up and down arrow buttons and press Enter
 3. Set the temperature trigger points using the up and down arrow buttons pressing Enter each time.
3. Plug an out going phone line into the Phone Dialer.
4. Program the Auto Dialer (See AVD-45b Installation & Instruction Manual), with the phone, or pager numbers to call.